

9. Rear Bumper


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the light assembly - rear combination.


CAUTION:

Be careful not to damage the clips.

- (1) Release the bolts and clips, then pull out the light assembly - rear combination to the vehicle rear.
- (2) Disconnect the connector and remove the light assembly - rear combination.

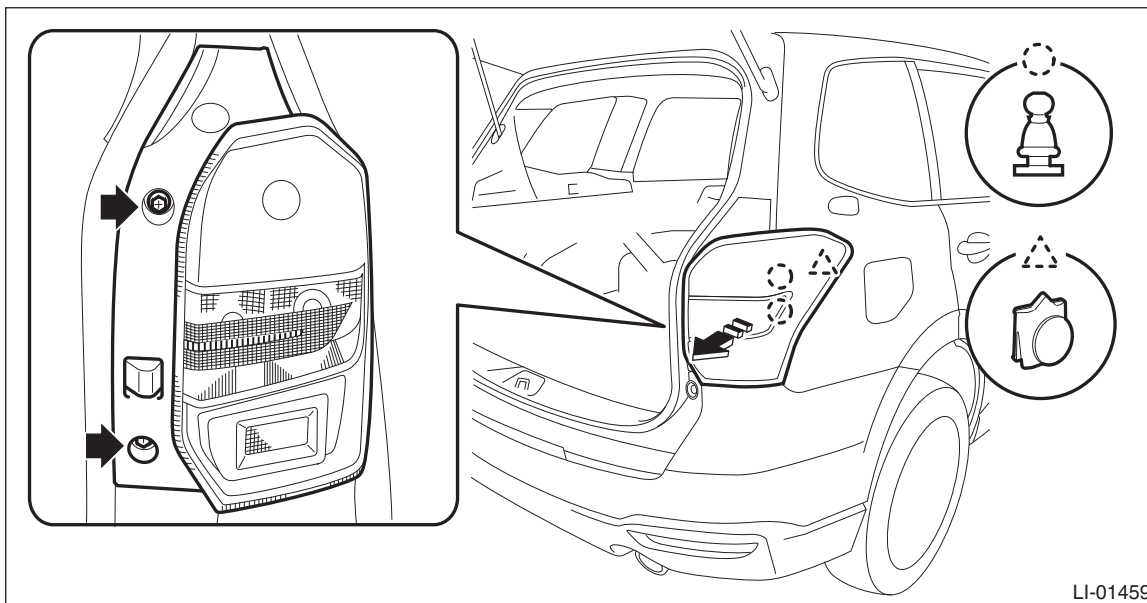

- 3) Remove the bumper face - rear.
 - (1) Remove the clips inside the wheel housing.
 - (2) Remove the clips at the lower side of the bumper face - rear.

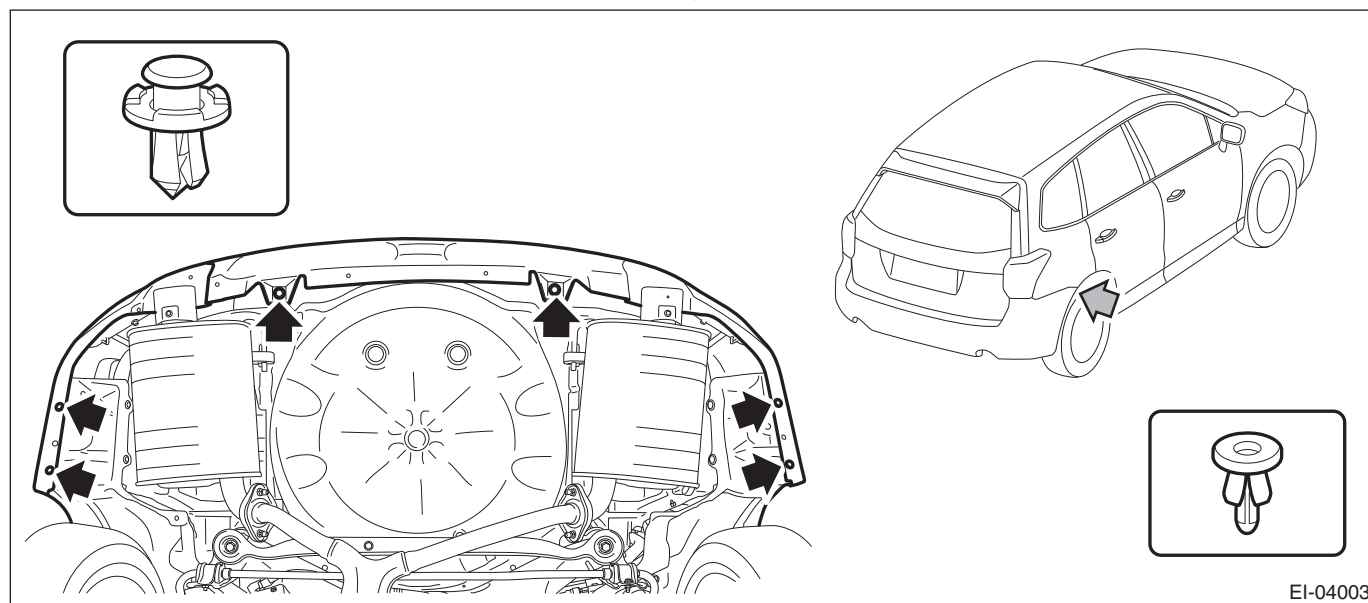

- (3) Detach (b) and (c) while pulling up (a) of the bumper face - rear.
- (4) Detach (e) while pulling up (d) of the bumper face - rear.
- (5) Detach the opposite side in the same manner.